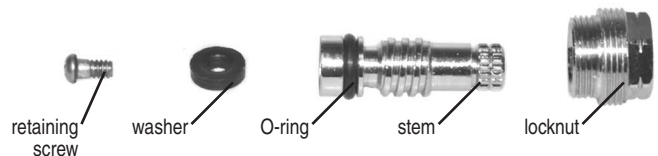


INSTRUCTIONS**IMPORTANT****BEFORE YOU BEGIN, TURN OFF THE WATER SUPPLY AND OPEN THE FAUCET HANDLE TO RELIEVE WATER PRESSURE.****Step 1 - Remove handle.**

Carefully remove handle retainer screw with a small Philips screwdriver, then lift handle.

**Step 2 - Remove housing retainer nut with a pair of channel lock pliers.****Step 3 - Remove the locknut with an adjustable wrench, then lift the spindle out of the faucet.****Step 4 - Perform the following as required:**

- As needed, remove the retaining screw and pry out the washer. Install an exact-replacement washer and tighten it.
- As needed, remove and replace the O-ring. Before reinstalling, coat the stem lightly with plumber's grease.
- As needed, inspect the seat and replace if damaged.

Step 5 - In reverse order, reinstall the valve and tighten, then reinstall the handle and test.

(End)

EG10061 Revised 12/06