

Height Adjustable Tables

OPERATION INSTRUCTIONS

CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.** YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

Thank you for your purchase. Before operation, read this instruction sheet carefully. After reading, be sure to store this instruction in a safe place, should it be needed for future reference.

Assembly

Your Eagle Group Height Adjustable Table has come completely preassembled. No tools are required. It will not need any maintenance or oil over its lifetime. The lift cylinders are self-contained and preassembled with the required volume of oil.

Operation

To level the height adjustable table:


- 1) Turn each adjustable foot clockwise or counterclockwise, as needed (see *figure 1*).

To raise the height adjustable table:

- 1) Gently raise handle into locked position (see *figure 2*).
- 2) Rotate handle clockwise.
- 3) Gently pull handle from locked position and lower until relaxed (see *figure 3*).

To lower the height adjustable table:

- 1) Gently raise handle into locked position (see *figure 2*).
- 2) Rotate handle counterclockwise.
- 3) Gently pull handle from locked position and lower until relaxed (see *figure 3*).

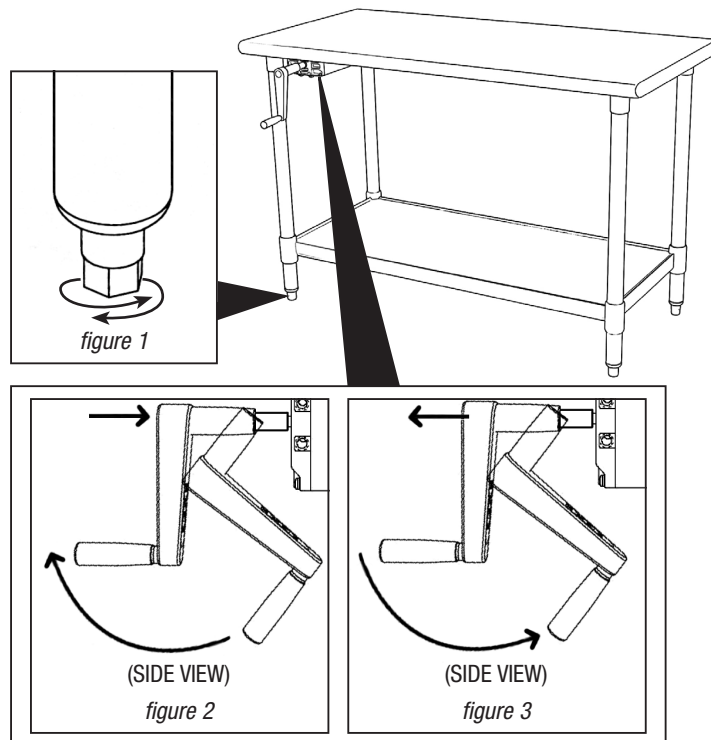

NOTE: If the table surface becomes un-level or stuck, rotate crank counterclockwise to lower table to its lowest possible setting. Apply pressure, if needed, to any stuck legs (do not exceed weight capacity) until the table is level in its lowest setting. Once complete, the table is operational again.

OPERATIONAL WARNINGS AND USE:

- 1) Do not exceed listed weight capacity (see chart below). Be aware of dynamic loading- sudden loading of the table can create moment loads exceeding the table's capacity. Avoid overloading the tables edges. Loads should be placed toward the center of the table and evenly distributed.
- 2) Only operate table on hard flat surfaces.
- 3) All casters (if included) must be in the locked position to operate table.

Safe operation load capacity (evenly distributed load) not to exceed the following specifications

Tables up to 48" long: 575 lbs.

Tables 49" to 72" long: 525 lbs.

(continued on back page)

EG9933 Revised 06/25

Height Adjustable Tables

OPERATION INSTRUCTIONS

Maintenance

- 1) All internal components are self-contained, requiring no maintenance.
- 2) The lower extending leg should be kept clean. Use only alcohol to wipe the leg. Use of soaps or detergents could cause harm to fittings and bushings.

Conditions of Warranty (see below for Warranty)

- 1) Any modification will void your warranty.
- 2) Attempting to remove the top will void your warranty.
- 3) Exceeding the load capacity will void your warranty.
- 4) Use of soap, detergents or cleansers on lower extending leg will void your warranty.

LIMITED WARRANTY FOR EAGLE PRODUCTS

Metal Masters Foodservice Equipment Co Inc. d/b/a Eagle Group or Eagle Foodservice Equipment ("Eagle") hereby warrants to you, the original purchaser and end-user ("you" or "your"), that the products manufactured by Eagle that you purchased which accompany this Limited Warranty ("products") shall be free from defects in materials and workmanship under normal use consistent with the accompanying documentation for a period of one year from the date of the original installation of the equipment, not to exceed 18 months from date of shipment from Eagle. Some exclusions apply, outlined below are the product offerings that have their own individual warranty standards.

Warranty provided is limited to repair, replacement, or refund of the purchase price of the affected goods. Seller shall not be liable for any indirect, special, incidental, punitive, or consequential damages of any kind including loss of use, loss of revenue, or interruption of business.

Failure to have service work approved before work is performed shall not be covered under this warranty. Use of an unauthorized agency will void the warranty.


The warranty covers substantiated travel expenses for up to 2 hours or 100 miles round trip up to a maximum of \$150.00. Any additional costs due to installations that require extra work, time, or travel to gain access to service are the sole responsibility of the equipment purchaser. Any exceptions to these travel and access limitations must be pre-approved by the factory Service Manager.

Accessory items such as faucets, electronic eye faucets, drains, pre-rinse units are covered by a limited warranty of 90 days, unless individual manufacturer warranty allows for additional time.

Eagle also provides individual limited warranties concerning specific product categories.

CARE AND CLEANING

CLICK HERE
for full
information sheet

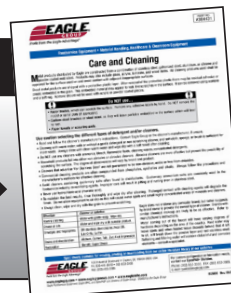

Profit from the Eagle Advantage®

- 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A.
- Phone: 302/653-3000 • 800/441-8440 • Fax: 302/653-2065
- www.eaglegrp.com • www.eaglemhc.com

Eagle Foodservice Equipment, Eagle MHC, and SpecFAB® are divisions of Eagle Group. ©2025 by the Eagle Group