

Expansion Applicator Casters

ASSEMBLY INSTRUCTIONS

CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE.

SAVE YOUR BOX AND ALL PACKING MATERIALS.

YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

Expansion Applicator Casters can be used for round tubular legs (shown below) and for square tubular legs.

Step 1


Hold bottom nut and tighten knurled nut until the rubber expansion applicator starts to expand.

Step 2

Insert caster into leg. The caster should fit snugly. If loose, go back to Step 1.

Step 3

With caster fully inserted into leg, tighten bottom nut* with a $\frac{3}{4}$ " or 19mm wrench.

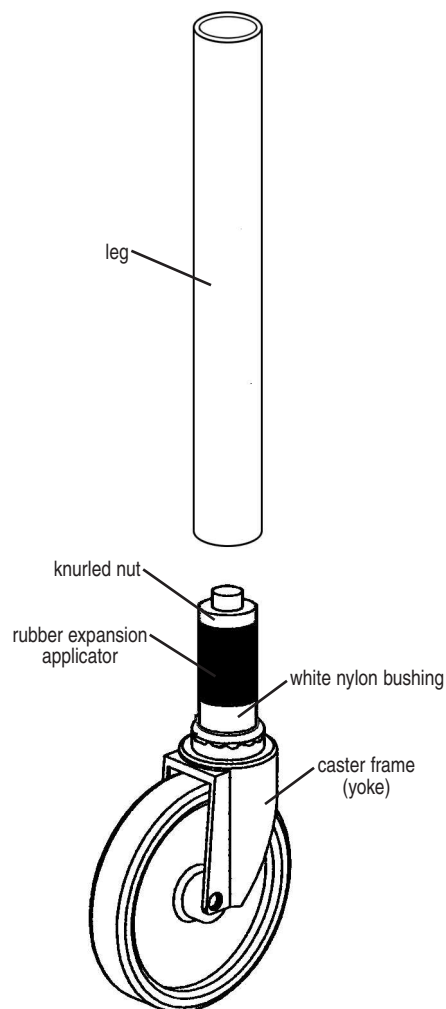

* Please note:
Bottom nut can be found
under caster frame (yoke).

