

Portable Hand Sink Supply Cart


ASSEMBLY INSTRUCTIONS

CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE.
SAVE YOUR BOX AND ALL PACKING MATERIALS.
YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

Step 1 - Place donut bumper onto bottom end of each post.


Bottom is end with hole for caster stem.

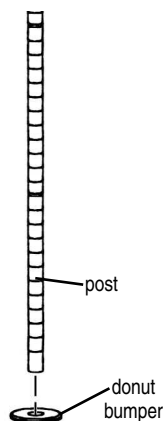

Step 2 - Drive in caster using a hammer or mallet.

Several solid blows are usually required.




NOTE: AFFIX CASTERS WITH BRAKE ONTO THE LONGER REAR POSTS.

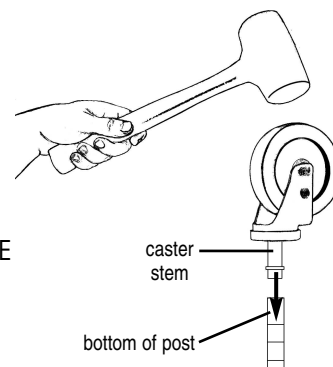

Step 3 - Attach split sleeves onto bottom most groove of all four posts.

- The wider part of the taper goes toward the bottom.
- Make sure rib on split sleeve is seated into groove on the post.

Note: The number covered by the split sleeve indicates approximate height of shelf.

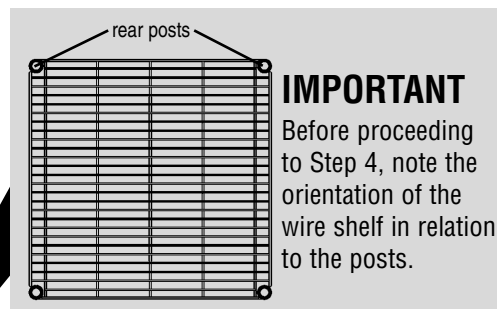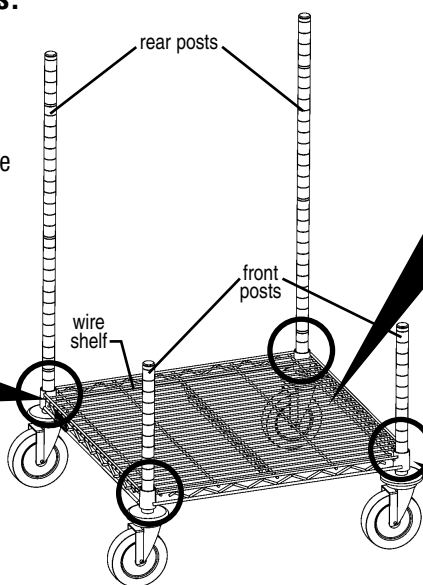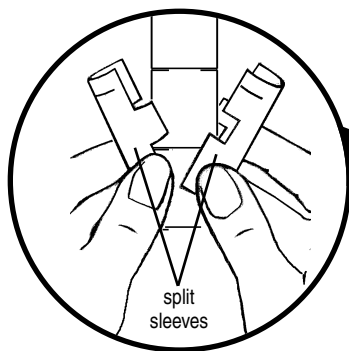


IMPORTANT

Before proceeding to Step 4, note the orientation of the wire shelf in relation to the posts.

Step 4 - Mount bottom shelf.

- Arrange post/caster assemblies as shown.
- Insert each post through shelf corner collars, and slide down until corner collars are snug on split sleeves.

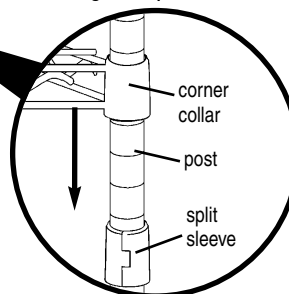



(continued on page 2)

EG9926 Revised 07/20


Portable Hand Sink Supply Cart

ASSEMBLY INSTRUCTIONS



Step 5 - Attach split sleeves onto the #10 groove of all four posts.

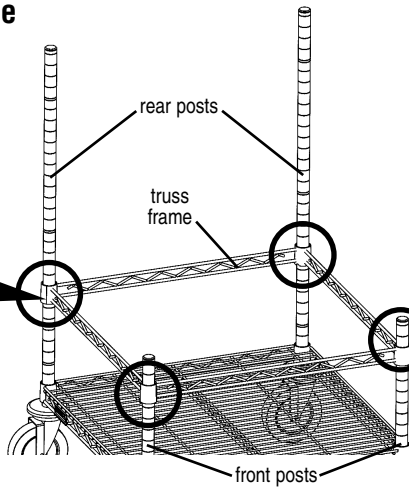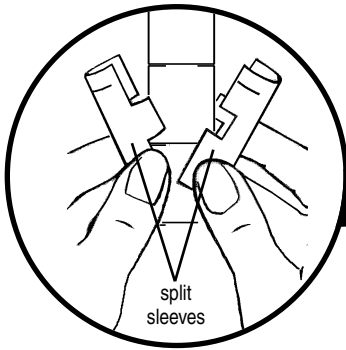


Step 6 - Mount truss frame.

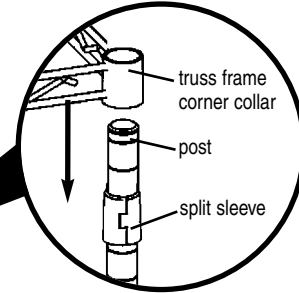

Step 7 - Attach split sleeves onto the #29 groove of rear posts.

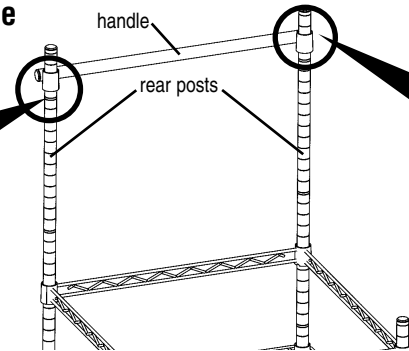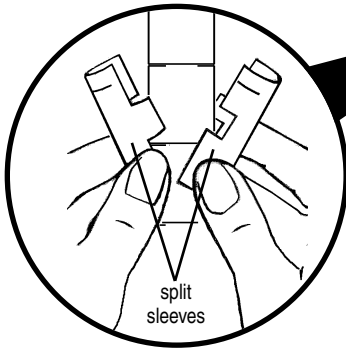


Step 8 - Mount handle.

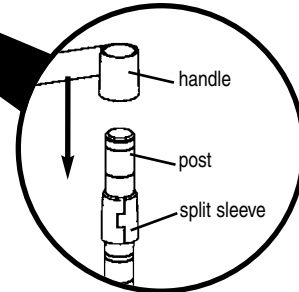

Step 9 - Hook basket onto truss frame at front.

Assembly is complete.

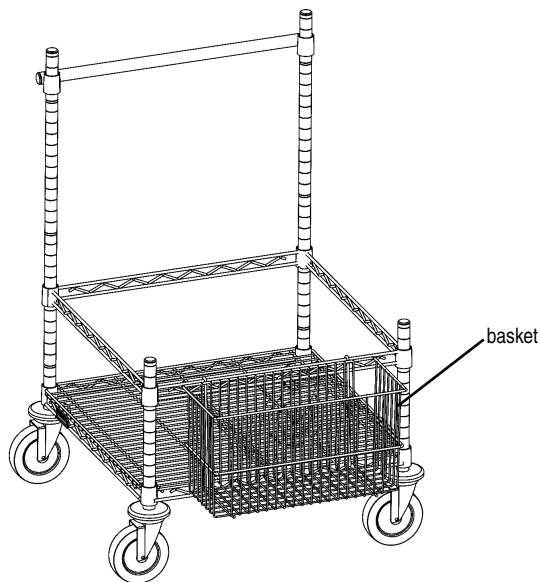

(End)