

Cleanroom Tables with H-Frame

ASSEMBLY INSTRUCTIONS



CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. **SAVE YOUR BOX AND ALL PACKING MATERIALS.** YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

For Cleanroom Table with C-Frame, see page 2.
For Cleanroom Table with Undershelf, see page 3.
For Casters, see back page.

Step 1 - Assemble tubular frame.



- Attach knockdown tube to front-to-back crossbracings.
- Tighten bolt at each end.

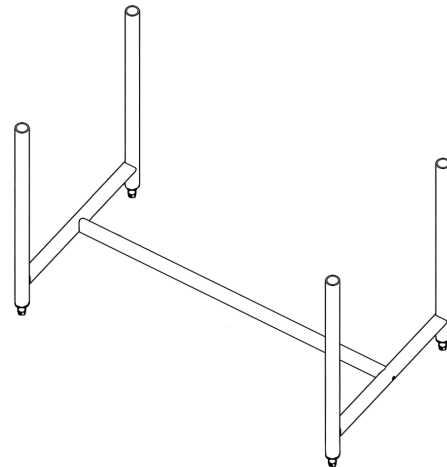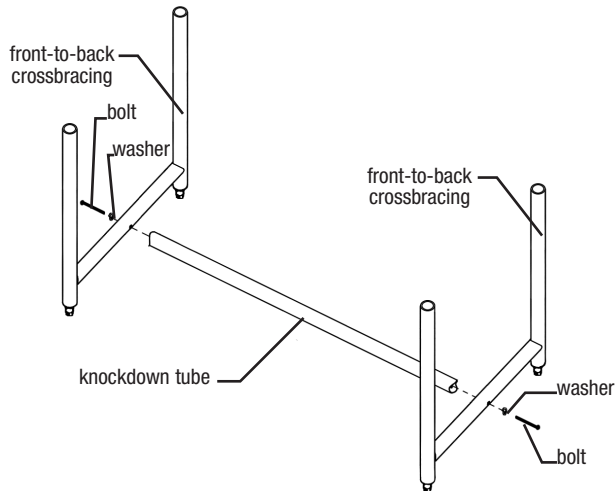

Frame fully assembled.

Step 2 - Attach tabletop.

- Turn tabletop upside-down (take care not to scratch the finish).
- Turn tubular frame upside-down and insert top of each leg into each tabletop gusset.
- At each gusset, tighten set screw.

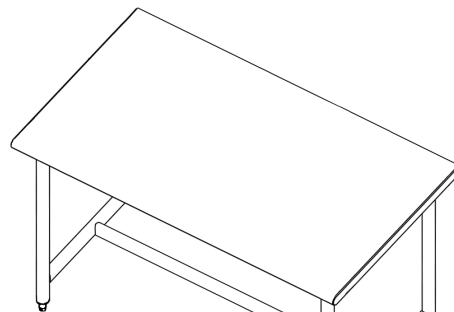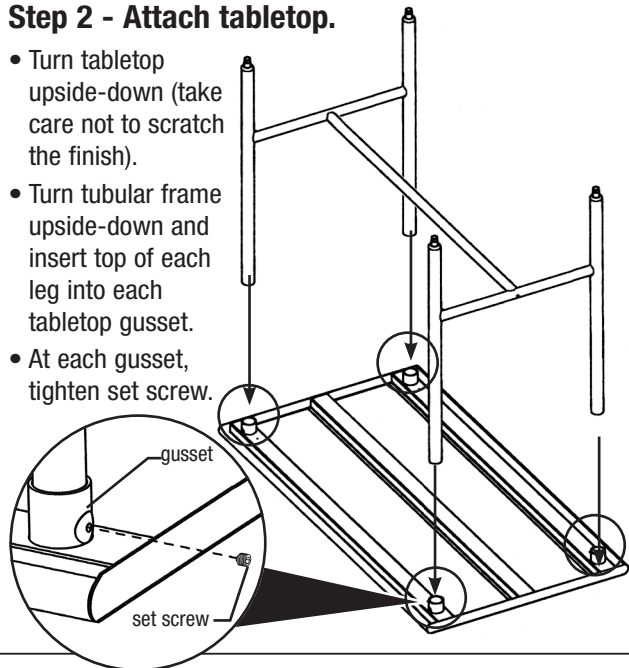

Level table with adjustable feet.

(End) Assembly is complete.

EG9895 Revised 11/24



Profit from the Eagle Advantage®

Eagle Foodservice Equipment, Eagle MHC, and SpecFAB® are divisions of Eagle Group. ©2024 by the Eagle Group

• 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A.
• Phone: 302/653-3000 • 800/441-8440 • Fax: 302/653-2065
• www.eaglegrp.com • www.eaglemhc.com

Cleanroom Tables with C-Frame

ASSEMBLY INSTRUCTIONS



For Cleanroom Table with H-Frame, see front page.

For Cleanroom Table with Undershef, see page 3.

For Casters, see back page.

Step 1 - Assemble tubular frame.



- Attach knockdown tube to front-to-back crossbracings.
- Tighten bolt at each end.

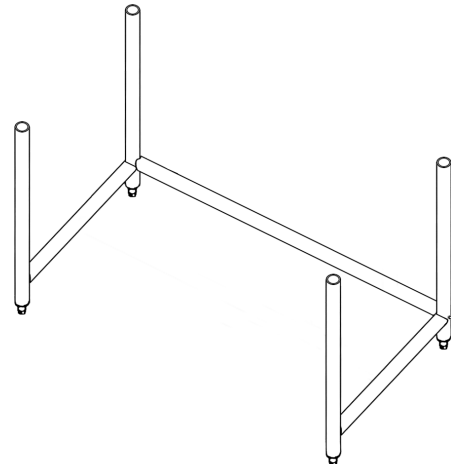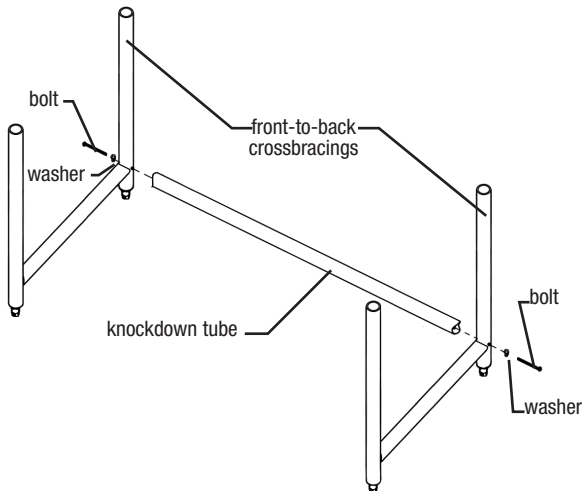


Frame fully assembled.

Step 2 - Attach tabletop.

- Turn tabletop upside-down (take care not to scratch the finish).
- Turn tubular frame upside-down and insert top of each leg into each tabletop gusset.
- At each gusset, tighten set screw.

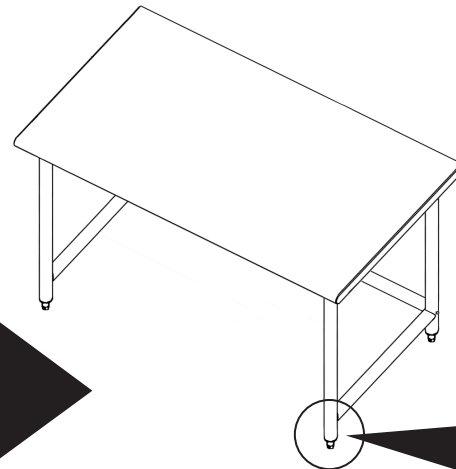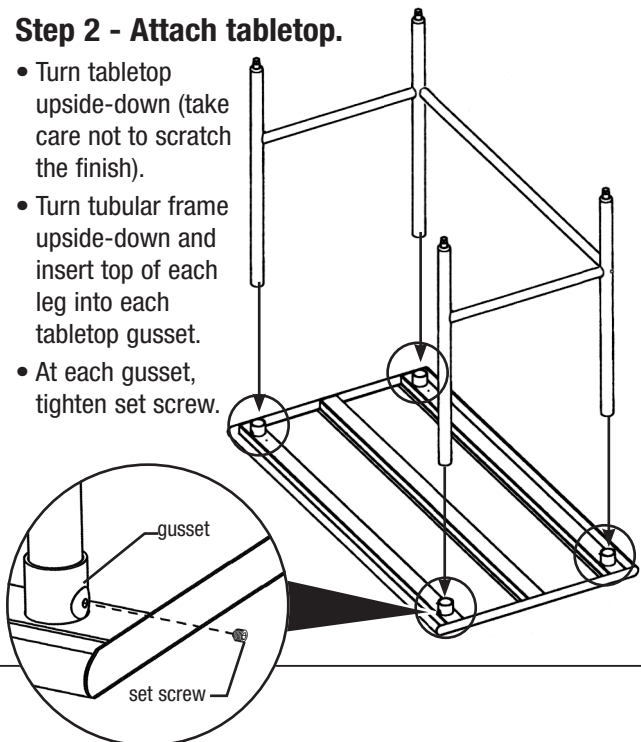

Level table with adjustable feet.

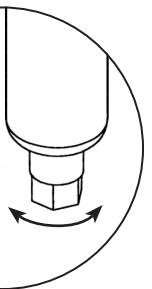

(End) Assembly is complete.

Cleanroom Tables with Undershelf

ASSEMBLY INSTRUCTIONS

For Cleanroom Table with H-Frame, see front page.


For Cleanroom Table with C-Frame, see page 2.

For Casters, see back page.

Step 1 - While on its side, mount undershelf to legs at desired height*. Seat one leg at a time.


- Secure legs to undershelf with set screw (using 5/32" allen wrench).
- Each leg must be at the same height or shelf collars could fail.

*** NOTE:** Undershelf must be level. Use care not to overtighten undershelf set screws or failure will occur. Recommended height from the floor to the top of undershelf is 10".

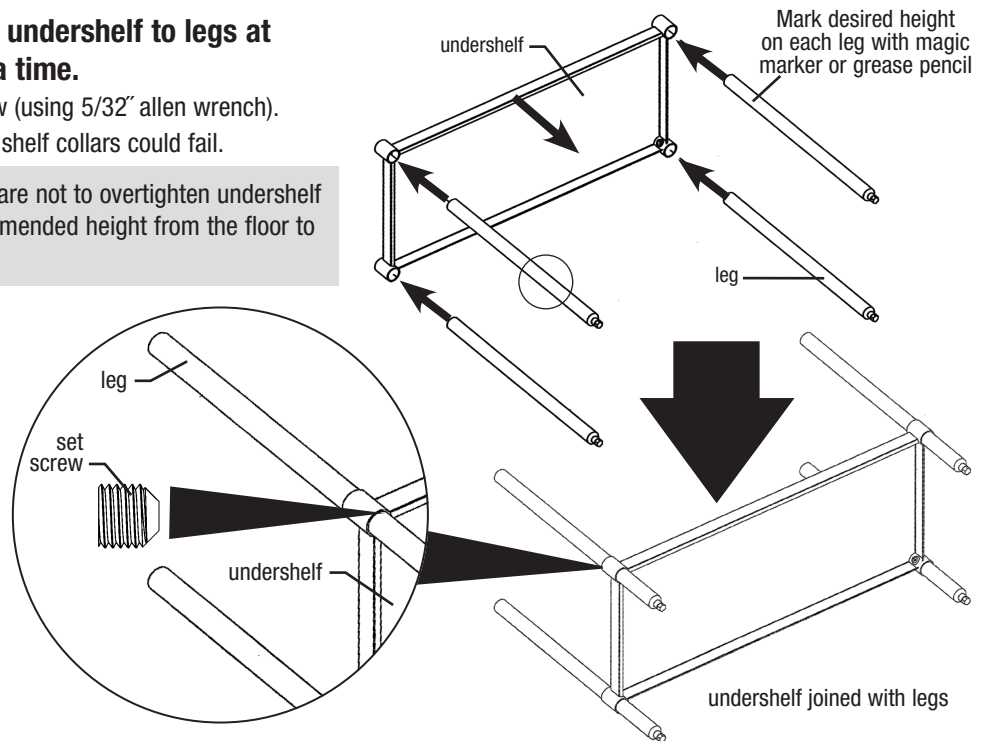


Step 2 - Stand table upright and mount tabletop.

- Place tabletop onto top of legs.
- Insert each leg into each tabletop gusset.
- With 5/32" allen wrench, tighten set screw* on each gusset.

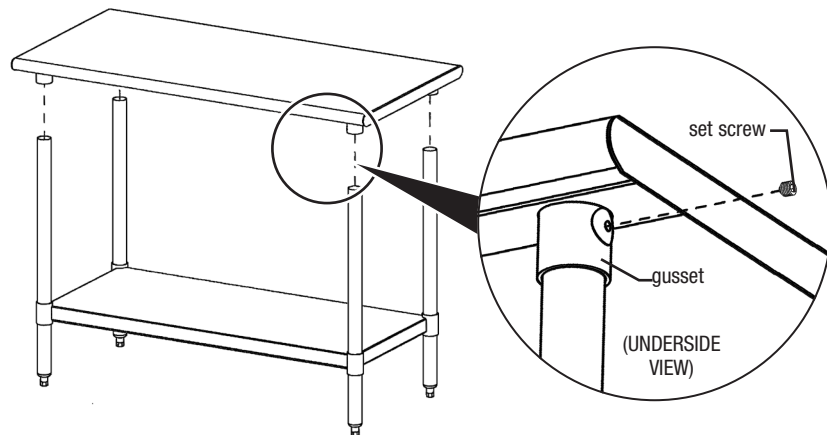

Step 3 - Level unit.

The leveling feet allow approximately 1" adjustment.

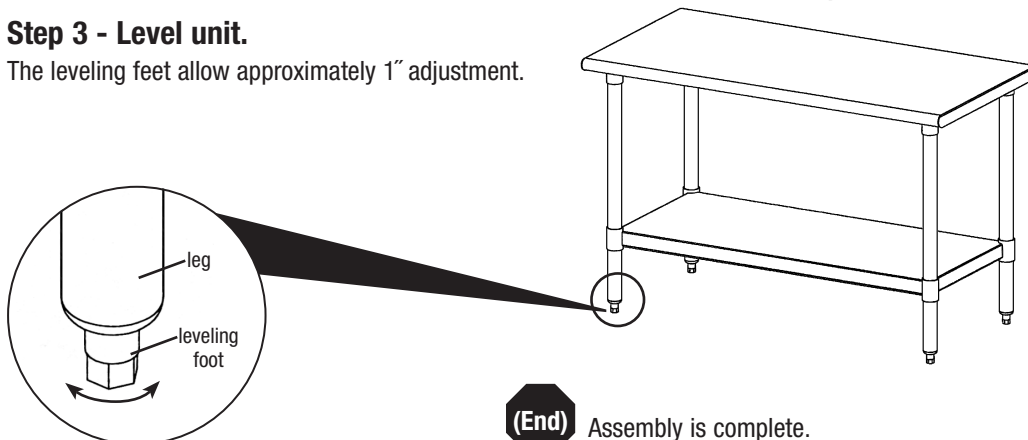

(End) Assembly is complete.

Expansion Applicator Casters

ASSEMBLY INSTRUCTIONS

For all Cleanroom Tables on this Instruction Sheet.

IMPORTANT!

Before assembly, verify what caster you have...

Casters with installation nut underneath caster frame...

Step 1


Hold installation nut and tighten knurled nut until the rubber expansion applicator starts to expand.

Step 2


Insert caster into leg. The caster should fit snugly. If loose, go back to **Step 1**.

Step 3

With caster fully inserted into leg, tighten installation nut* with a 3/4" or 19mm wrench.

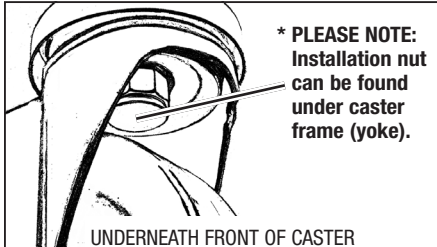

(End) Assembly is complete.

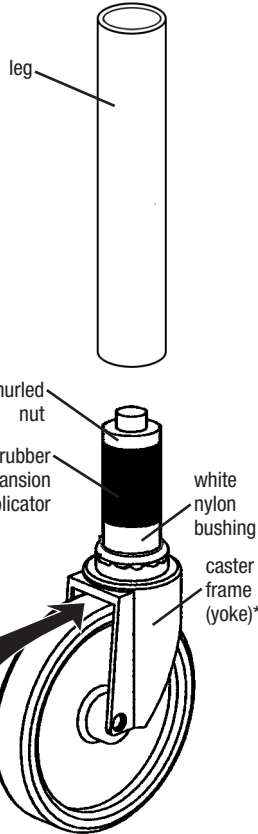

Casters with installation nut on top of caster frame...

Step 1

Hold installation nut and tighten knurled nut until the rubber expansion applicator starts to expand.


Step 2

Insert caster into leg. The caster should fit snugly. If loose, go back to **Step 1**.

Step 3


With caster fully inserted into leg, tighten installation nut, using an adjustable wrench.

(End) Assembly is complete.

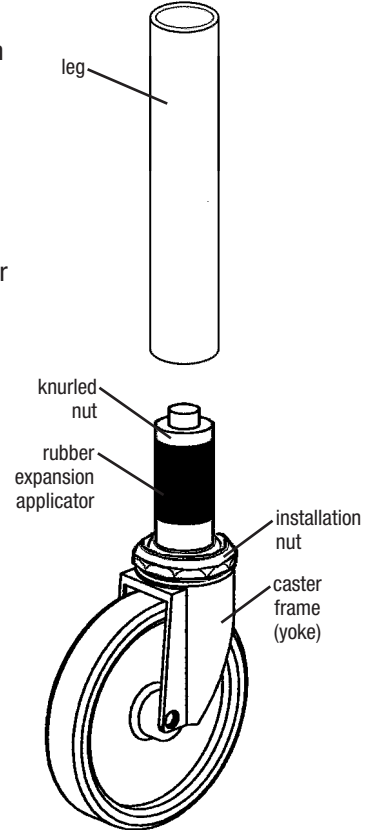

CARE AND CLEANING

CLICK HERE
for full information sheet

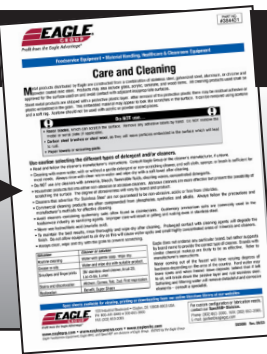

• 100 Industrial Boulevard, Clayton, Delaware 19938-8903 U.S.A.
• Phone: 302/653-3000 • 800/441-8440 • Fax: 302/653-2065
• www.eaglegrp.com • www.eaglemhc.com

Eagle Foodservice Equipment, Eagle MHC, and SpecFAB® are divisions of Eagle Group. ©2024 by the Eagle Group